

## Daily cleaning instructions

**Attention!** For a correct cleaning we must follow the following steps. Before starting, we will disconnect the machine from the network.

### ! Warnings for sanitize and cleaning

It is necessary to clean every day all those elements being in contact with the juice.



Every piece, except the cover, can be introduced on the dishwasher machine.



It is needed to clean it by a desinfectant product after the cleaning process.



The cleaning process for squeezing area and his extraible components have to be done by a humed cloth.



Clear with water after sanitation, in order to remove any component of desinfectant.

We recommend daily cleaning in case of consumption of 60 daily juices, if the figure is lower, you can clean every two days



1

Open the door of the machine by turning the lock with the key.



2

Place the key switch in its hole. Just above the vasero.



3

Check that the display is in the start phase (shows the version of the machine)




4

Remove the waste bin.



5

Release the squares of the squeezing set.

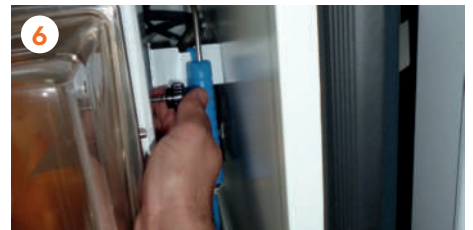


6

From both sides of the machine.



7

"Unplug the juice tube that is on the side."

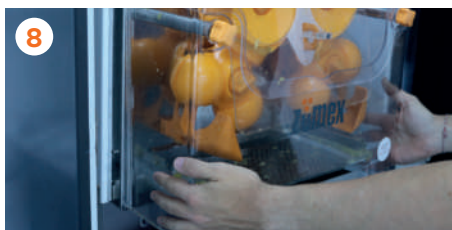

8

Dismantle the squeezing group.



9

Place below the waste bin.



10

Remove the complete oranges to not waste it and press the self-cleaning button and clean.



11

Let the machine dislodge the oranges from the Expression group.



12

Unscrew the knobs and remove the cover.

## Daily cleaning instructions




13 Remove the anti-splash plate.



14 Release the knob from under the bucket.




15 Remove the pulp sweeper.

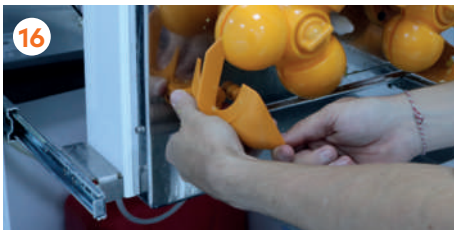


16 Remove the pulp ejector.



17 Dismantle the squeezing group piece by piece.

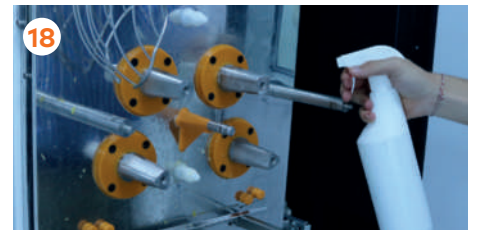

18 Wet the front pancha with a degreaser.

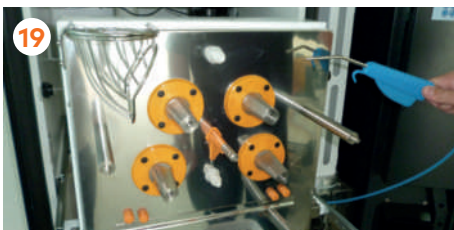

19 Wipe gently with sponge and mild soap. Rinse again with the gun.



20 Clean the bottom of the bowl with the gun.



21 Disconnect the juice tube that is behind the bowl.



22 Remove the tube by stretching from the through hole.



23 Change, clean and refill the service water carafe.



24 Disconnect the sensor from the waste water jug.



25 Remove the decanter, empty waste and clean its interior.



26 Once we have all the pieces disassembled, we proceed to clean them with a degreasing disinfectant.



## Monthly Cleaning Instructions



1

Open the door of the machine by turning the lock with the key.



2

Place the key switch in its hole. Just above the vasero.



3

Check that the display is in the start phase (shows the version of the machine)




4

Remove the feeder grate.



5

Empty the oranges that remain in it.

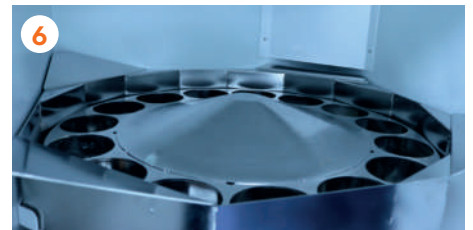


6

When the feeder is empty, you can proceed with its disassembly.



7

With an Allen key, unscrew the screws that are located on the feeder.

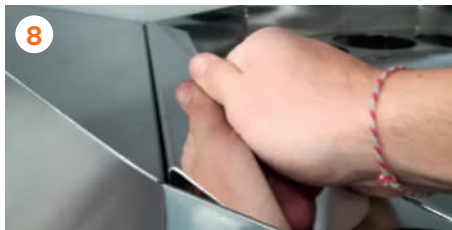

8

Remove the closing piece.



9

Remove the orange dispenser.




10

Wipe the surface of the feeder with a cloth and mild soap.



11

Remove the glass window, pressing the inner lever.

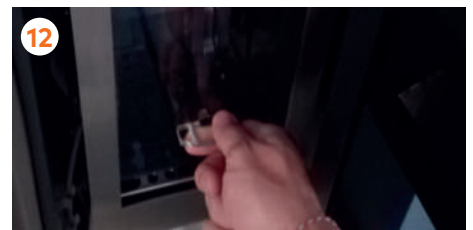

12

Remove the rack coasters.



13

Go ahead the waste bin.



14

Release the squares of the squeezing set.



15

From both sides of the machine.

## Monthly Cleaning Instructions



16

Disconnect the tube that is place it at the side.



17

Disconect the tube that if place it behind the glass dispenser.



18

Change, clean and refill the service water carafe.




19

Remove the pulp sweeper.



20

Release the knob from under the bucket.

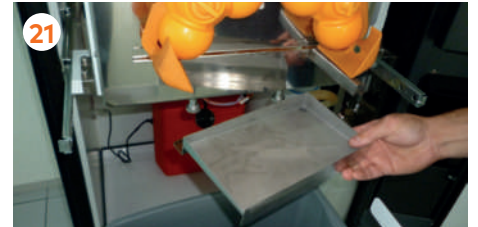

21

Remove the juice tray.



22

Dismount the squeezing kit.



23

Place it below the waste bin.



24

Take the oranges out from the squeezing unit  
Press the automatic cleaning and proceed to clean.



25

Let the machine dislodge the oranges from the Expression group.




26

Unscrew the knobs and remove the cover.



27

Remove the anti-splash plate..

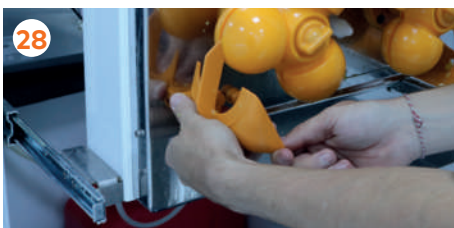


28

Dismount the wedges.



29

Dismount the squeezing kit.

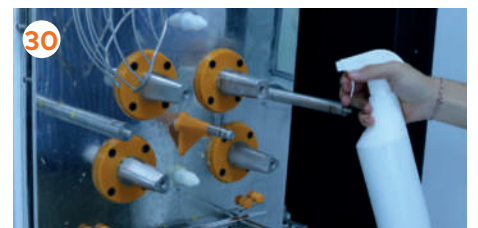

30

Wet the front pannel with a degreaser.



## Monthly Cleaning Instructions



31

Wipe gently with sponge and mild soap. Rinse again with the gun.



32

Clean the bottom of the bowl with the gun.



33

Clean the optos with a clean cloth (Important for proper operation).




34

Disconnect the juice tube that is behind the landlord.



35

Remove the tube by stretching from the through hole.

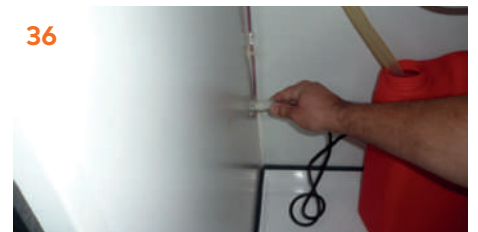


36

Disconnect the sensor from the waste water bottle.



37

Remove the decanter, empty waste and clean its interior.

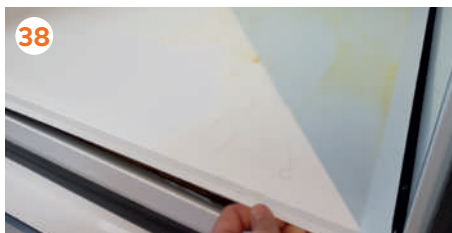

38

Remove the tray and clean it with a damp cloth.



39

Once we have all the pieces disassembled, we proceed to clean them with a degreasing disinfectant.

### ! We do recommend

- Have a kit of clean exchange parts to make the sanitization of the machine more agile.
- Perform cleaning of the machine every time the orange charger is filled.
- Do not allow more than 48 hours to pass between cleaning and cleaning.
- Change the juice tube as soon as it is dirty or damaged.
- Use a degreasing product to remove the remains of wax and pulp accumulated in drums.